

TCL

androidtv

OPERATION MANUAL

C725/C727/P725 SERIES

 
Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance. Product design and specifications may be changed without notice.

Connections and Setup

Remote Control Functions

Most of your television's functions are available via the menus that appear on the screen. The remote control supplied with your set can be used to navigate through the menus and to configure all the general settings.

Notes: 1. Figures and illustrations in this operation manual are provided for reference only and may differ from actual product appearance. 2. The remote control type may be changed without notice, please refer to the remote control attached with your TV. 3. Certain function may not be available for some models.

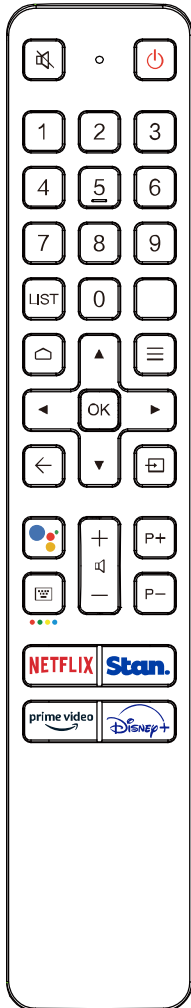

	To switch the sound off and back on.
	Standby / quit standby.
Numeric buttons	To enter channel numbers or a digit.
LIST	To display the channel list.
	To display the TV settings menu.
	To access the Smart TV homepage.
	To display the Option menu.
	Navigation direction buttons.
OK	To confirm an entry or selection.
	To return to the previous menu or quit an app.
	To select input source.
	Press the Assistant button on your remote to talk to the Google Assistant. (Available only when the network connection works normally.)
	To pop up the virtual remote control keyboard when available.
	To control the volume.
P+/P-	To change channels.
NETFLIX	To access Netflix.
Stan.	To access Stan.
prime video	To access Prime video.
Disney+	To access Disney.

Notes:

- Certain function may be accessed from the virtual remote control keyboard only, please press button on the remote to display it and operate accordingly.
- The App buttons may differ depending on the model. The App button is used for accessing the corresponding App.

 
Google and Android TV are trademarks of Google LLC.

How to Use the Remote Control

- Before using the Google Assistant button, you must finish pairing the remote with the TV first.
- This Google Assistant function is only available for content search from certain apps.
- Set languages in the (**Settings**) > **Device Preferences** > **Language** under smart TV homepage to your local language or official language to enhance voice search successfully.

Installing Batteries

1. Push to open the back cover as illustrated.
2. Insert two AAA batteries according to the polarities marked on the battery case.
3. Replace the back cover as illustrated.

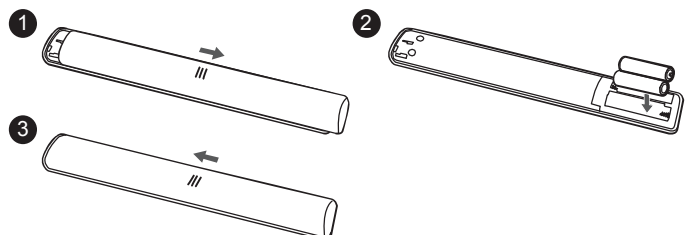

Connections and Setup

Network Connection



Your TV will require an internet connection to operate all functions. Data usage charges may apply. Please refer to your Internet Service Provider (ISP) for additional information.

To access the internet, you must subscribe to high speed broadband internet service from your internet service provider.

Your TV can be connected to your home network in two ways:

 
- Wired, using the RJ45 (LAN) connector on the back panel.
- Wireless, using the internal wireless or external wireless USB adapter and your home wireless network.

Note: The following instructions are just the usual ways to connect your TV to the wired or wireless network. The connection method may be different depending on your actual network configuration. If you have any questions about your home network, please refer to your ISP(Internet Service Provider).

Connecting to a wired Network

To connect to a wired network:


1. Ensure you have:
 - An Ethernet cable long enough to reach your TV
 - A router or modem with an available Ethernet port
 - A high-speed internet connection
 - An **Ethernet (LAN) port** on the back of the TV
2. Connect your Ethernet cable to the router and to the **Ethernet port** on the back of the TV.
3. Use the **Network & Internet** menu to configure the TV.

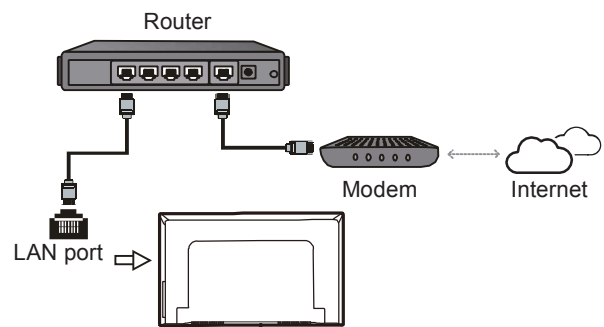







Connecting to a Wireless Network

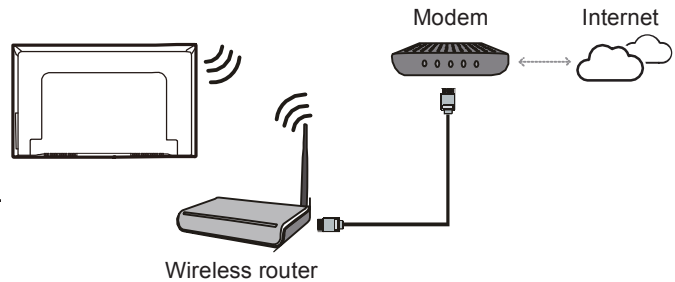 To connect to a wireless network:

 1. Ensure you have:
 - A router broadcasting a high-speed wireless signal
 - A high-speed internet connection
2. Use the **Network & Internet** menu to configure the TV.



Note: Please follow below steps to enter the **Network & Internet** menu.

1. Press  on the remote control to display the Smart TV homepage.
2. Press   to move the cursor to  (**Settings**) on the right top of the screen and press **OK** to enter.
3. Press   to select **Network & Internet**, then press **OK** to enter the submenu and follow the on-screen guidance to set up your network.

Accessing Channels

Using the ▲/▼ buttons: press the ▲/▼ buttons on the remote control to scroll through the channels.

Using the OK button: press the OK button to display the channel list and press ▲/▼/◀/▶ and OK to select channels.

Using the P+/P- buttons: press the P+/P- buttons on the remote control to scroll through the channels.

Using the [Grid] button: press [Grid] to display the virtual remote control keyboard, then you can use the numeric buttons or the LIST button to operate accordingly.

Using the numeric buttons: press the corresponding numeric buttons on the remote control to access the channels.

Using the LIST button: press the LIST button on the remote control to display the channel list and press ▲/▼/◀/▶ and OK to select channels.

Watching Connected Devices

Press [Input] on the remote control to display the source list. Press ▲/▼ to select TV or other input sources and press OK to confirm.

You can also press [Home] on the remote control to display the homepage, press ▲/◀/▶ to move the cursor to the [Inputs] area on the right top of the screen, and press OK to enter. Then press ▲/▼ and OK to select the input source.

 
Adjusting Volume

Volume control: press the [Volume Up/Down] buttons on the remote control or the corresponding buttons on the TV set to increase or decrease the volume.

Sound mute: press the [Mute] button to temporarily mute the sound. Press this button again or the [Volume Up] button to restore the sound.

Accessing Smart TV Homepage

Allows you to enjoy Internet Applications (Apps) and specially adapted Internet websites, and perform system settings for your TV. You can make controlling with the TV remote control.

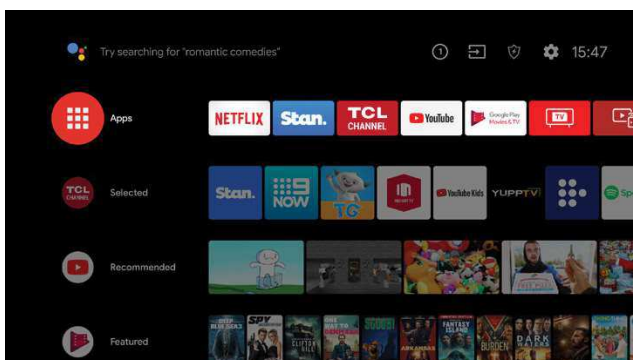

WARNING:

 
- Configure the network settings before using **Smart TV applications**.
- Slow responses and/or interruptions may occur, depending on your network conditions.
- If you experience a problem using an application, please contact the content provider.
- According to circumstances of the content provider, an application's updates or the application itself may be discontinued.
- Depending on your country's regulations, some applications may have limited service or not be supported.
- Changes in application content may be made without prior notice by the service provider.

1. Press [Home] on the remote control to display the Smart TV homepage.
2. Press ▲/▼/◀/▶ and OK to enter the desired apps, functions or settings.
3. Press ← to return to the homepage.
4. To exit the homepage, press ▲/◀/▶ to move the cursor to the [Inputs] area on the right top of the screen, press OK to enter and then press ▲/▼ and OK to select your desired input source.

Note: Since the connection with Internet takes time, it's recommended that you wait a few minutes to use the Smart TV feature after activation of TV from standby.

Accessing Google Play

Google Play is your entertainment unbound. It brings together all of the entertainment you love and helps you explore it in new ways, anytime, anywhere. We've brought the magic of Google to music, movies, TV, books, magazines, apps and games, so you get more from your content every day.

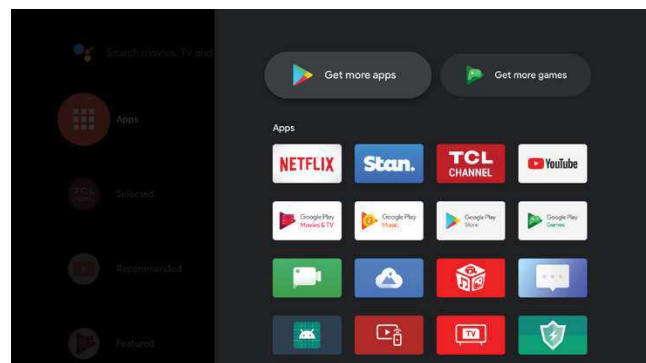


1. Press [Home] on the remote control to display the Smart TV homepage.
2. Press ▲/▼ to select the **Apps**, and press OK to enter. Then press ▲/▼/◀/▶ and OK to enter the desired apps.
3. Press ← to return to the homepage.

Basic TV Operations

Accessing TCL Channel

 
Allows you to enjoy Internet Applications (Apps).

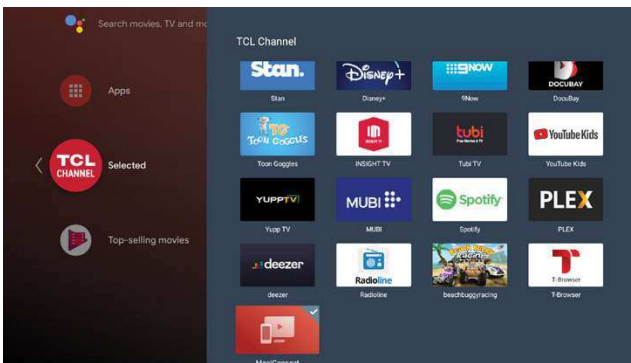

1. Press on the remote control to display the Smart TV homepage.
2. Press to select the **TCL Channel** and press **OK** to enter. Then press and **OK** to enter the desired apps. For the first time, the apps will be downloaded automatically.
3. Press or to exit.

Using System Settings Menu

 Allows you to not only adjust device settings, such as Network & Internet, Accounts & Sign-In, Apps and Device Preferences, etc., but also set preferences.

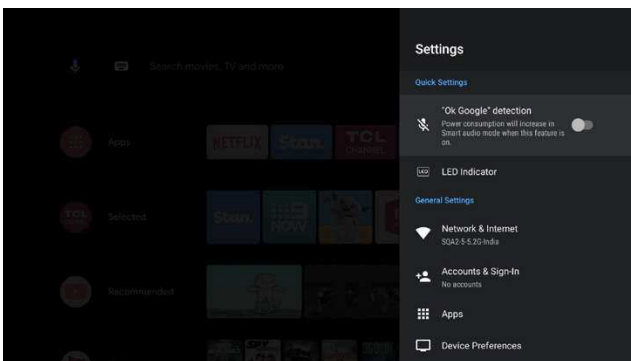

1. Press on the remote control to display the Smart TV homepage.
2. Press to move the cursor to (**Settings**) on the right top of the screen and press **OK** to enter the system settings.
3. Press to choose the items and press **OK** to enter.
4. Press to return to previous interface.

Using Quick Start Function

It enables you to turn on your TV faster from standby mode than turning this function off, but it will also increase standby power consumption.

 
1. Press on the remote control to display the homepage, Press to select (**Settings**) >

Device Preferences > Quick Start > Enable Quick Start and press **OK** to toggle between on and off.

2. Press to return to previous interface.

Using TV Settings Menu

Allows you to adjust TV settings, such as picture and sound.

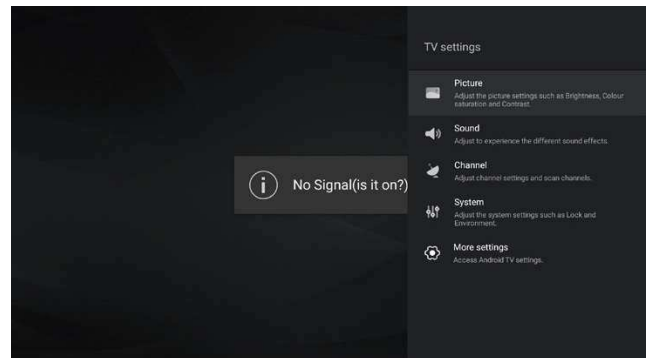

1. Press on the remote control to display the TV settings menu.
2. Press to select the desired item, then press **OK/▶** to enter the corresponding submenu.
3. In submenus, press to select menu options, then press **OK/▶** to enter the option list or the corresponding submenu, or press **OK** to toggle on or off, or press to adjust the setting.
4. Press to return to the previous menu.
5. Press to close the menu.

Notes:

- You can also press on the remote control, select **TV settings** (if available) and press **OK** to enter the TV settings menu. Some options may not be available for certain signal sources.
- Setting **LED motion clear** on will make fast moving images clearer by controlling the LED backlight, but the picture will be darker and more flickering than with **LED motion clear** off. (**Note: The LED motion clear** option is not available for some models.)